

CELLSWITCH PROGRAMMING	
General Setup	
1234.F1"Cellswitch"	Device Name
1234.F2"0827775301"	Device's Cell Number
1234.F3a	Switch relay output when call is received
1234.F3b	Enable/disable inputs when call is received
Security Setup	
1234.F4a"072997360;0836282483"	Add security Numbers
1234.F4b"0729973640;0836282483"	Delete security Numbers
1234.F4on	Enable security (Relay output will switch when called)
1234.F4off	Disable Security
1234.F5a"5678"	SMS Password Change
Sms Reporting Options	
1234.F6a"0824176510"	Sms reporting number 1
1234.F6b"0824176510"	Sms reporting number 2
1234.F6c"0824176510"	Sms reporting number 3
1234.F6d"0824176510"	Sms reporting number 4 (When inputs are triggered)
1234.F7on	Enable send daily sms status report
1234.F7off	Disable send daily sms status report
1234.F7"12:00:00"	Daily sms report time
1234.F8on	Enable send power up sms report
1234.F8off	Disable send power up sms report
1234.F8a	Send power up report to USER1 only
1234.F8b	Send power up report to ALL users
Digital Input Options	
1234.F9a"Sensor 1 triggered"	Input 1 HIGH sms
1234.F9b"Water level Low"	Input 1 LOW sms
1234.F9c"Power restored"	Input 2 HIGH sms
1234.F9d"Power tripped"	Input 2 LOW sms
1234.F10a	Input trigger-High (5-24V)
1234.F10b	Input trigger-High and Low
1234.F10c	Input trigger-Low (0V or not connected)
1234.F11on	Enable reporting to users when input triggered
1234.F11off	Disable reporting to users when input triggered
1234.F12on	Enable call to all users when input triggered
1234.F12off	Disable call to all users when input triggered
1234.F13on / 1234.Arm	Enable inputs
1234.F13off / 1234.Disarm	Disable inputs
1234.F13a"Alarm armed"	Input enabled reporting message
1234.F13a"Alarm disarmed"	Input disabled reporting message
1234.F14"3"	Input 1 trigger DELAY time
Output Relay Options	
1234.On	Turn relay output ON
1234.Off	Turn relay output OFF
1234.F15a	Relay output in PULSE mode
1234.F15b	Relay output in LATCH mode
1234.F15"5"	Relay output pulse TIME
1234.F16On	Enable Send output triggered report
1234.F16Off	Disable send output triggered report
1234.F16a"Lights switched On"	Output relay ON triggered message
1234.F16b"Lights switched off"	Output relay OFF triggered message
1234.F16c"Gate opened"	Output relay PULSE triggered message
Sms I/O Control Commands	
1234.Status	Request input/output and signal quality status
1234.Signal	Requests GSM signal strength 1.0=Bad Signal, 30.0=Full signal
1234.Airtime	Request remaining airtime
1234.On	Switch relay output ON
1234.Off	Switch relay output OFF
1234.Arm	Enable inputs trigger sms report
1234.Disarm	Disable inputs trigger sms report