

D3/D5 Theft Resistant Cage V3

Parts Identification


INTRODUCTION

The CENTURION theft resistant cage is designed to significantly reduce the risk of an intruder gaining access to the operator and increases the resistance of the unit against theft.

It is important that the bracket is properly fitted as per the instructions given and that a suitable lock is fitted.

DISCLAIMER

CENTURION SYSTEMS cannot be held liable under any circumstances for any damage, loss or action that results from the cage being forced open or tampered with.

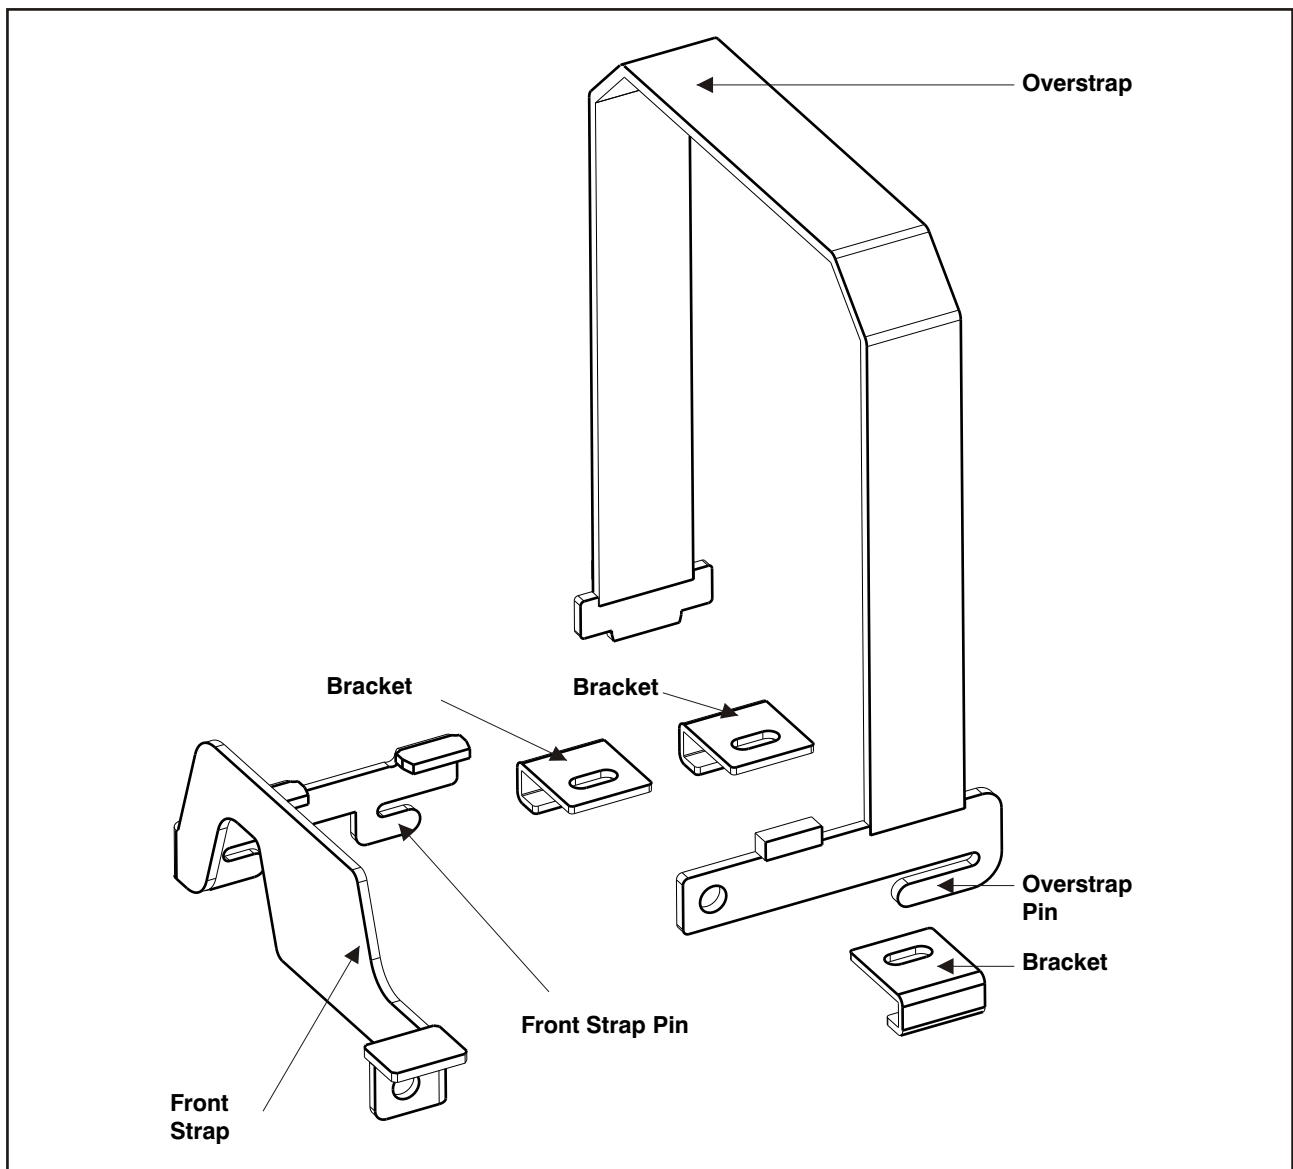

Ref. 1010.D.01.00169_5




E&OE Centurion Systems (Pty) Ltd reserves the right to change products or specifications without prior notice.

CENTURION SYSTEMS (Pty) Ltd
148 Epsom Avenue, North Riding, Randburg, South Africa
Tel: +27 (0)11 699-2400 Fax: +27(0)11 704-3412 or +27(0)11 462-6669 (Sales)
www.centsys.co.za

D3/D5 Theft Resistant Cage V3 Installation Instructions




IMPORTANT! For magnetic origin operator models, relocate gate magnet as close as possible to operator cover and reset gate limits.

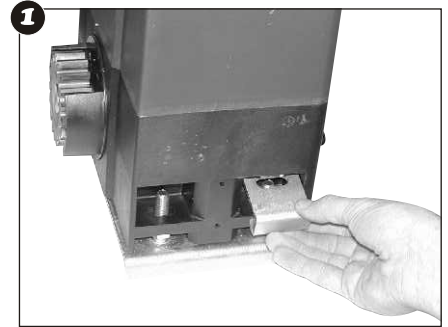

1 Remove side vents, retaining nuts & washers. Fit a bracket to each of the LHS retaining studs.




2 Re-fasten the washers and nuts to the retaining studs to secure the brackets.

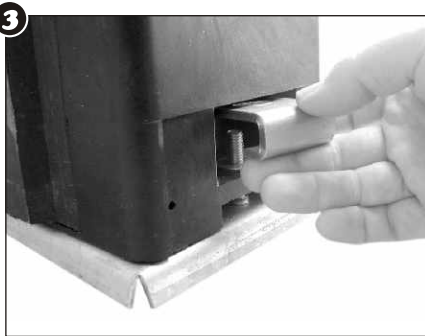


3 Fit bracket on to the RHS retaining stud.




4 Re-fasten the washer and nut to the retaining stud to secure the bracket.

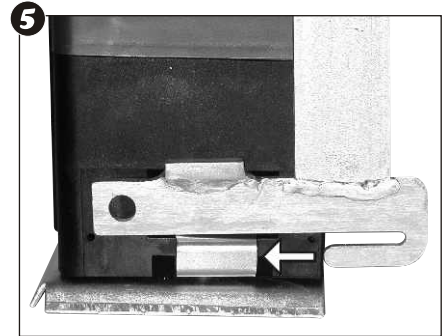


5 Slide overstrap over motor

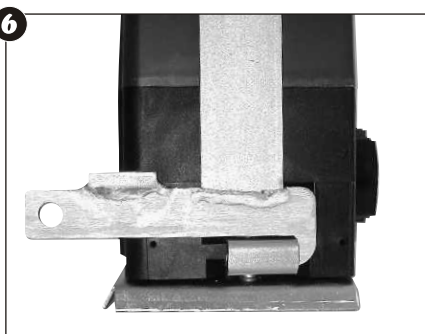


6 Overstrap pin must engage with the RHS bracket.

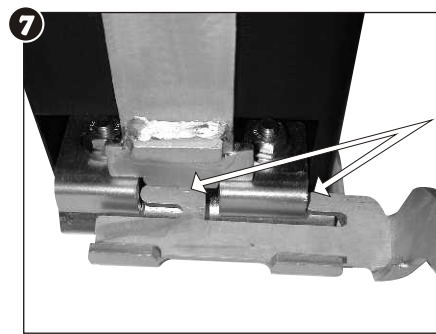


7 Line up the front strap pins with the LHS brackets. Slide the front strap forward.

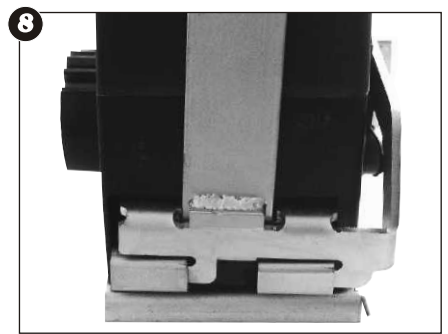

8 Ensure that the pins are fully engaged in the brackets.

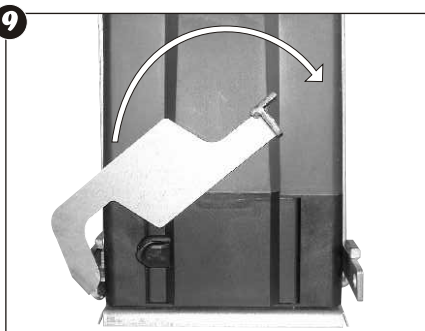

9 Swing the front strap down in front of the motor.

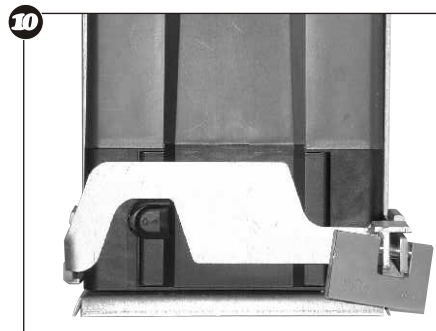

10 Finally, secure the cage by locking the front strap and the overstrap together with a padlock with substantial shackle, sized such that minimum shackle is exposed.

