



Dominator 24v installation and programming instructions

Limit setting

- 1) Engage door to motor.
- 2) Press and hold “up” button. “L” will display. Release.
- 3) Press “up” button until door is open to requirement.
- 4) Press “set” button. “d” will display. Release.
- 5) Press “down” button until the door is closed to requirement.
- 6) Press “set” button.
- 7) The door will open and close automatically. The limits are now set.

NB: If you overrun while setting either up or down limit, you can correct by pushing the “open” or “closed” button before pushing the “set” button.

Remote programming

- 1) Press “code” and release. “.” Will display.
- 2) Press the remote button you want programmed twice.
- 3) Repeat steps one and two for additional remotes.

NB: To delete all the programmed remotes, simply press and hold “code” button until “.” Stops flashing. All codes are now deleted. The onboard receiver holds 20 remotes.

Sensitivity setting

- 1) Press and hold “down” button. “p” will display. Release. “down” button.
- 2) Press “up” or “down” to increase or decrease sensitivity.
- 3) Press “set” when happy with the sensitivity.

NB: There are 9 levels of sensitivity. The motor comes set on 4 which is normally correct for all doors. Sensitivity 9 is extremely powerful. Try not to use this level.