

DTS 600 EAZI AUTO QUICK SET UP
<p>1 Power unit on 2 Press/Hold K1 till LED displays the number 1 3 Press/hold K3 till traveller has reached opening position. Press/Hold K4 if you have overrun. 4 Press/Release K1 to confirm. 5 Press/Hold K4 till traveller has reached closed position. Press/Hold K4 if you have overrun. 6 Press/Release K1 to confirm.</p>
DTS 600 EAZI AUTO SENSITIVITY
<p>1 Press/Hold K1 till LED displays numbers 1-3 2 Press/Release K3 to increase sensitivity by 1 degree. 3 Press/Release K4 to decrease sensitivity by 1 degree. 4 Press/Release K1 to confirm.</p>
DTS 600 EAZI AUTO TX PROGRAMMING
<p>1 Press/Release K2 2 Press/Release Tx button, LED dot will go off. 3 Press/Release Tx button, LED dot will flash to confirm Tx has been learnt. Note: To delete all remotes Press/Hold K2 until a C appears.</p>
DTS 600 EAZI AUTO AUTOCLOSE
<p>1 Press/Hold K4 until a – displays and then II. 2 Press/Release K3 until H displays, autoclose is now enabled. 3 Press K1 to confirm. 4 To disable auto close Press/Release K1 when II is displayed.</p>
DTS 600 EAZI AUTO AUTOCLOSE TIME
<p>1 Press/Hold K3 until number 1 is displayed. 2 Press/Release K4 to increase time by 1 minute, Press/Release K3 to decrease time by 1 minute. 3 Press/Release K1 to confirm.</p>